



AWL-The Amber Warning Lamp (AWL) illuminates when the vehicle needs to be serviced at the first available opportunity. Additional information will be displayed on the LCD screen.

RSL-The **RED** Stop Lamp illuminates **RED** when a serious problem has occurred. If the **RED** Stop Lamp illuminates, immediately pull the vehicle safely off the roadway and stop the engine. The engine should not be restarted prior to being serviced. Additional information will be displayed on the LCD screen.

PARK (P) Illuminates **RED** when the parking brake is applied.

EMERG EXIT Illuminates when the emergency exit is not securely closed when the key switch is in the Accessory or ON position.

Illuminates **YELLOW**. Used in conjunction with other Warning indicators to indicate an Alert condition to the operator. Additional information will be displayed on the LCD screen.

RANGE INHIBITED Illuminates **YELLOW** when the transmission is not engaged in the selected gear.

Optional Wait to Start Lamp illuminates **YELLOW** when intake air heaters and glow plugs are in operation and special starting procedures are required.

(TC) Illuminates **YELLOW** when the traction control system is turned off. Blinks on if slippery road conditions may exist. If this happens, adjust your driving accordingly.

Illuminates **YELLOW** (Solid or Flashing) when the Diesel Exhaust Fluid (DEF) level is low.

ECON Illuminates **YELLOW** when transmission Economy Mode is selected.

Illuminates **YELLOW** when exhaust system components are operating under normal conditions and exhaust gases are at extremely high temperatures.

(ABS) Illuminates **YELLOW** when an antilock brake system malfunction has been detected.

Diesel Particulate Filter (DPF) status indicator. Illuminates **YELLOW** (Solid or Flashing) to indicate the need to regenerate the Diesel Particulate Filter.

MIL-The Malfunction Indicator Lamp (MIL) illuminates when the On-Board Diagnostics (OBD) detect a malfunction related to the emissions control system. The vehicle needs to be serviced at the first convenient opportunity. Additional information will be displayed on the LCD screen.

Optional indicator illuminates **RED** immediately after ignition is turned on to remind operator to fasten seat belt.

RED FLSHR Illuminates when the red flasher warning lights are activated.

AMBER FLSHR Illuminates when the amber warning flashing lights are activated.

Illuminates when the bus is actively intervening to prevent loss of vehicle control.

WARNING INDICATORS GUIDE

IC Bus CE Series



LEONARD
Bus Sales Inc
www.leonardbus.com

All rights reserved. May not be reproduced or copied.