

# Configuring a Blue-Link (Android )

## Step 1

Install the Blue-Link device in the 9-Pin diagnostic port and turn the key to the "ON" position.




## Step 2

Press the blue button on the Blue-Link to begin Bluetooth connection.




## Step 3

Open Settings

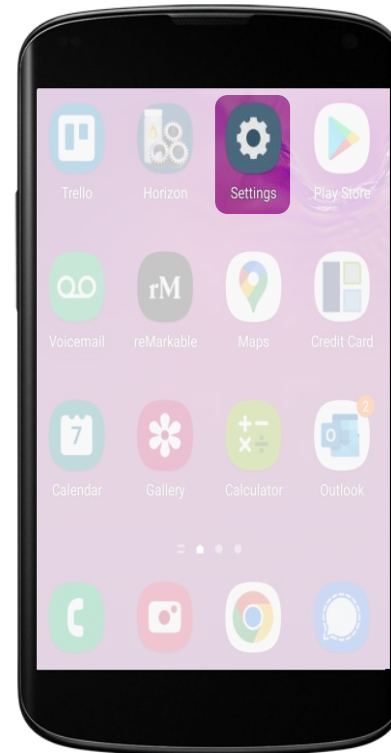

## Step 4


Open the Connections menu.

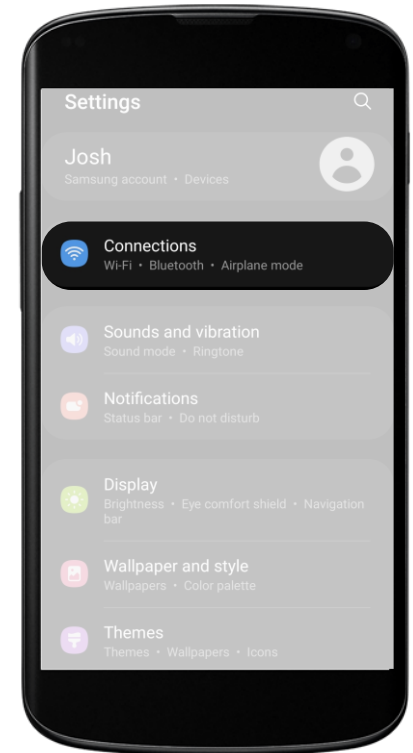

# Configuring a Blue-Link (Android )


## Step 5

Select the Bluetooth Menu

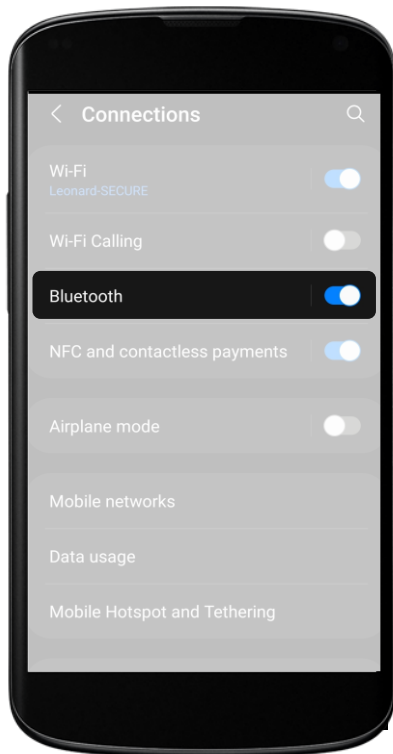

## Step 6

Select the Blue-Link device from the menu of other devices.

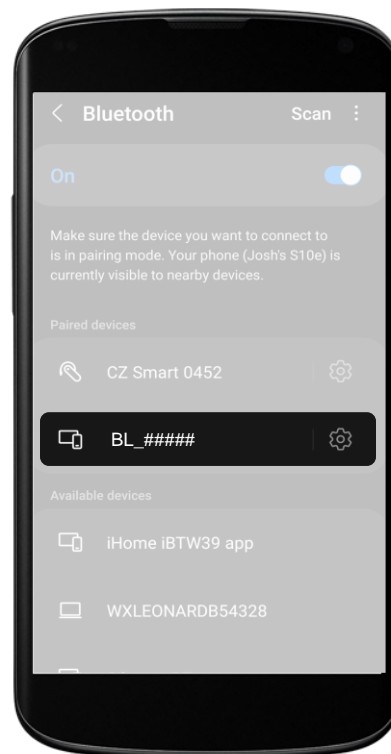


## Step 7

Once you have connected to the device, return to your home screen and open the First-Link App.



## Step 8


With the app open, select the gear icon.

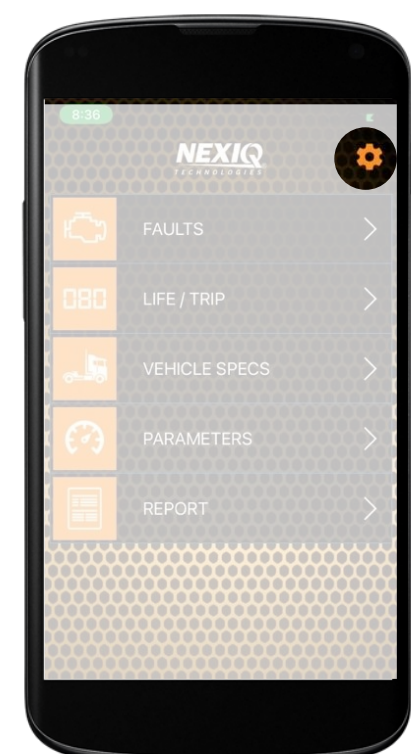

# Configuring a Blue-Link (Android )

## Step 9

Choose Select a Diagnostic Adapter.

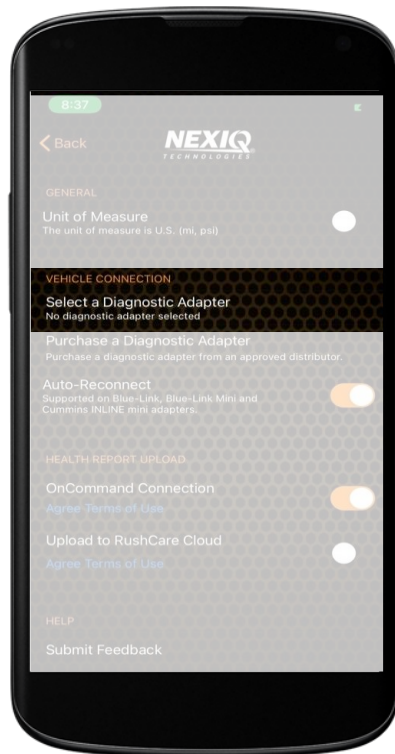


## Step 10

Select Your Adapter



## Step 11

In the gear/settings menu, move the slider next to OnCommand Connection to the right.

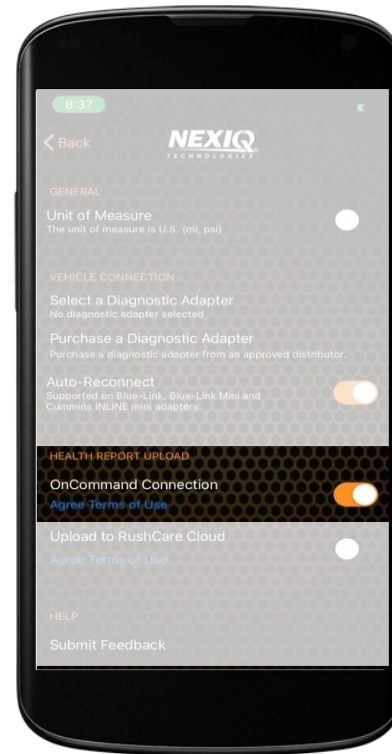

## Step 12

The device is now ready to use. With the key on, select "Scan" to begin running a health report.

