

Configuring a Blue-Link (iPhone 🍏)

Step 1

Install the Blue-Link device in the 9-Pin diagnostic port and turn the key to the "ON" position.




Step 2

Press the blue button on the Blue-Link to begin Bluetooth connection.




Step 3

Open Settings

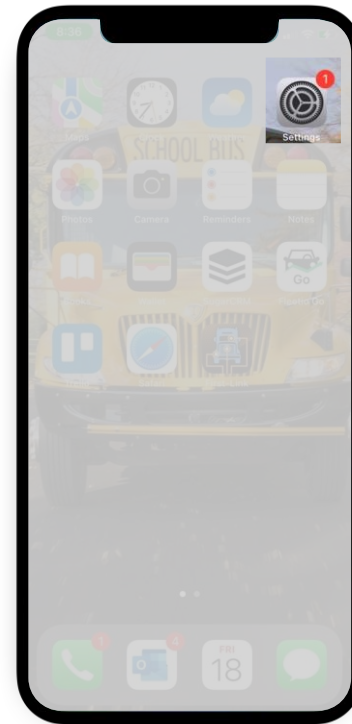

Step 4

Open the Bluetooth menu.

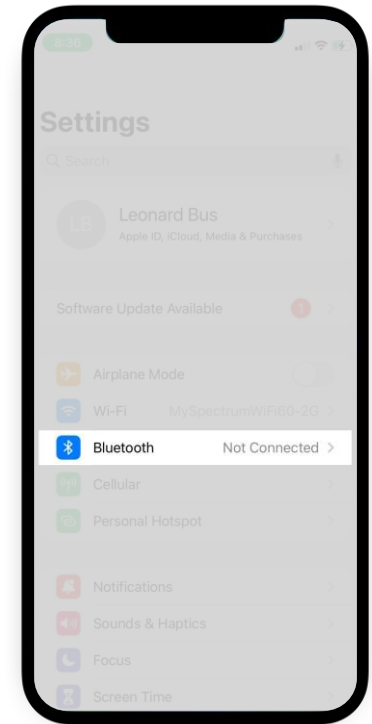


Configuring a Blue-Link (iPhone 🍏)



Step 5

Select the Blue-Link device from the menu of other devices.

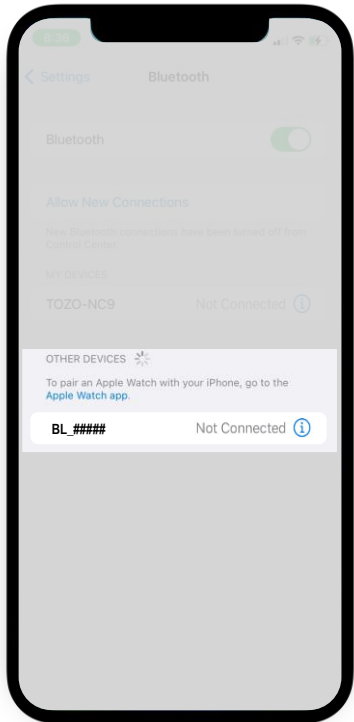


Step 6

Once you have connected to the device, return to your home screen and open the First-Link App.




Step 7

With the app open, select the gear icon.

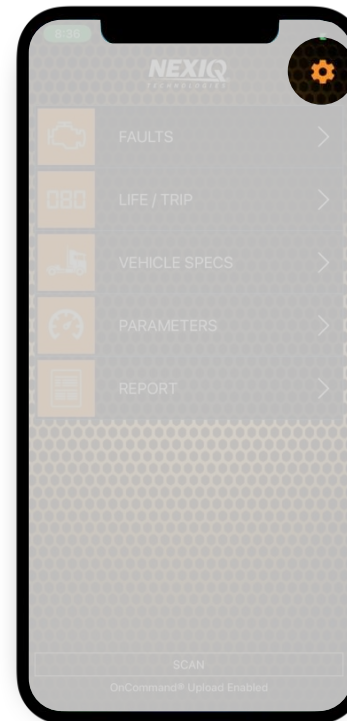

Step 8

Choose Select a Diagnostic Adapter.

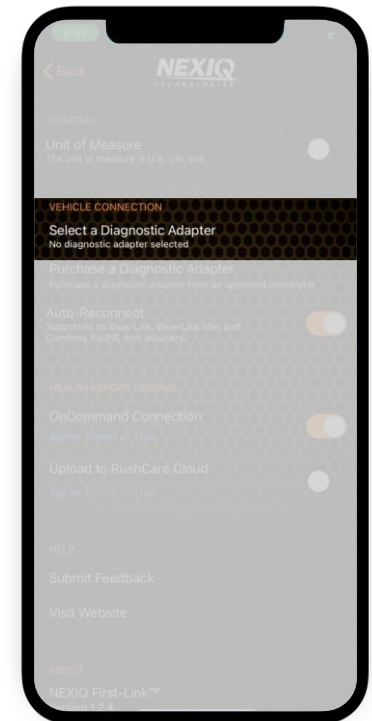

Configuring a Blue-Link (iPhone 🍏)


Step 9

Select your adapter.



Step 10

In the gear/settings menu, move the slider next to OnCommand Connection to the right.

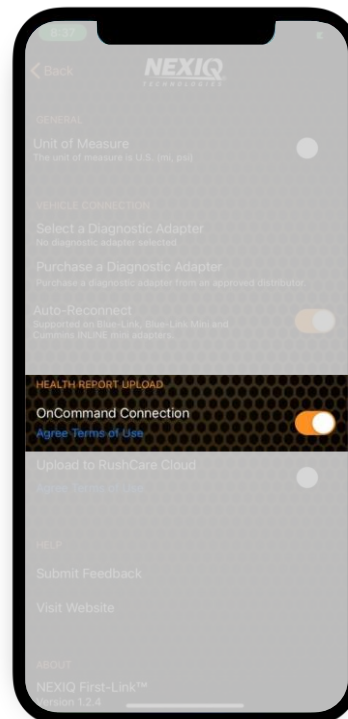

Step 11

The device is now ready to use. With the key on, select "Scan" to begin running a health report.

